



# Olympus Tough TG-1 Clip Slip Replacement

Check to see if the back plate can be placed back onto the camera. Make sure there are an even number of clips physically on the back plate. If one or more clips seemed to have been broken, then the back plate needs to be replaced.

Written By: Grant Lee





## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Clip Side Repair



- Remove both .6 cm screws from the clip side of the camera. If one of more of the clips appear to be broken the back plate might need to be replaced.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-06 08:50:10 PM.